

Signal Booster Installation Guide

Cell Phone SIGNALBOOST™ Sleek™

Universal Dual-Band Signal Booster with Built-in Antenna

Model # 2B5225 FCC ID: PWO2B5225 IC: 4726A-2B5225
U.S. Patent No. 7,684,838

Contents:

How it Works	2
Install Diagrams - Vehicle	2
Vehicle Installation	3
Power up the Wilson Sleek™	4
Adjusting the Sleek™ Arms	4
Understanding the Sleek™ Lights	5
Troubleshooting	5
Building Installation	5
About Wilson Electronics	6
Signal Booster Specifications	Back Cover
Warnings	Back Cover



The weak link in cell phone systems, is the low signal power of the cell phone. The Sleek™ boosts the cell phone power many times.

To amplify your phone's signal power,
the phone must be placed in the Sleek™ cradle.

To achieve the best performance while the phone remains in the Sleek™,
use a Bluetooth headset or hands free device.

Warning: This manual contains important safety and operating information. Please read and follow the instructions in this manual. Failure to do so could be hazardous and result in damage to your Sleek™.

Inside this Package


Sleek™ Universal Cell Phone Signal Booster



DC Plug-In Power Supply



Mini-Magnet Mount Antenna



Adjustable Arms



Vehicle Dash Adhesive Mounting Bracket

NOTE: If product# 815225 was ordered, package will only include Sleek™ wireless amplifier cradle and DC power supply.

Accessory Antenna Options

In addition to the convenient mini magnet roof mount antenna included with your kit, Wilson Electronics offers a wide variety of outside antennas to help you customize your amplifier for a specific application. All models shown below double the power to the cell site compared to the mini magnet antenna. See your dealer or visit www.wilsonelectronics.com for more information.

301225
12" Magnet Mount Antenna



301101
Trucker Antenna

Designed for mirror mounting on large trucks.

Mounts on Wilson 3/8" mounts: 901104 and 901106

* Must utilize 971119 Adapter (SMA-FME)



301104
NMO Mount Antenna

For permanent vehicle roof mount on cars and pickup trucks.

Mounts on Wilson NMO style mounts: 901101, 901102, and 901103

* Must utilize 971119 Adapter (SMA-FME)



301133
RV Antenna

Ideal for mounting on non-metal surfaces.

* Must utilize 971119 Adapter (SMA-FME)


Accessories for your Sleek™


* **859969**
AC Power Supply

* **901128**
Antenna Window Mount
(Used with Mini-Magnet Mount Antenna)

* **901132**
Adjustable Suction Cup Cradle Mount



901120
Gooseneck Suction Cup Cradle Mount



901130
Cup Holder Cradle Mount



901134
Vehicle Dash Mounting Kit
-Rugged/Screw Mount-
-Adhesive Mount-
-Vent Clip Mount

* All 3 available together in the Home Accessory Kit - **859970**

Warning: This manual contains important safety and operating information. Please read and follow the instructions in this manual. Failure to do so could be hazardous and result in damage to your Sleek™.



General

Your Wilson Sleek™ has been carefully engineered to significantly improve the performance of your phone. Together with an outside antenna, the Sleek's state-of-the-art circuitry is designed to increase your phone's signal to and from the cell site. The Sleek™ reduces disconnects and dropouts and increases data communication rates on 2G and 3G networks.

How it Works

With the phone in the cradle and while using a wireless Bluetooth headset (or hands free device) the outside antenna collects the cell tower signal and sends it through its cable to the Sleek™. The signal is then boosted by the Sleek™ and sent to the phone. When the phone transmits, the signal is picked up wirelessly and boosted by the Sleek™ and broadcasted back to the cell tower via the outside antenna.

NOTE: The cell phone must be placed in the cradle to work properly.

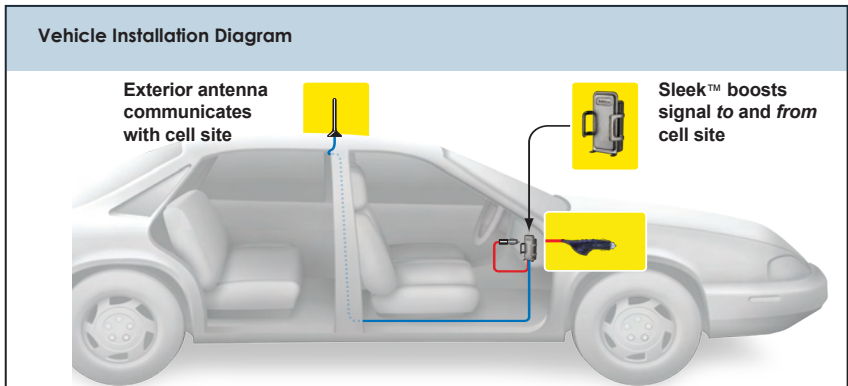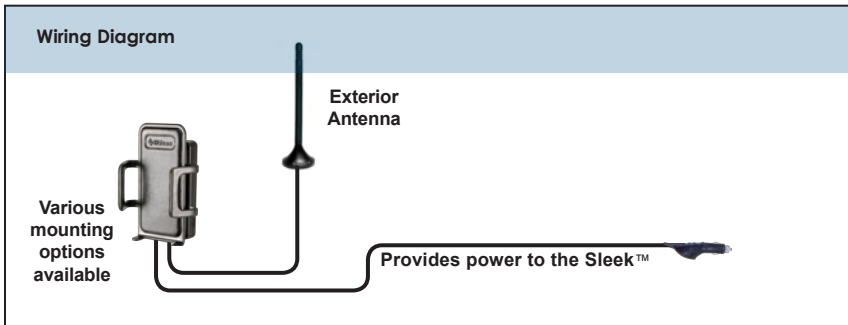


Warning:

DO NOT use phone covers that have chrome or any other metallic surface. It may block cellular signals

Vehicle Installation

1. Install the Outside Antenna

To receive the best cell signal, select a location for the outside antenna that is preferably in the center of the vehicle's roof, 12 inches away from any other antennas, free of obstructions, and at least 6 inches from the rear or side windows or sunroof.

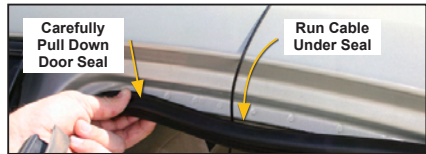

The outside antenna must be installed vertically. Antenna performance will be degraded if the antenna is not vertical.

The antenna cable is small yet strong enough that it may be shut in most vehicle doors without damaging the cable.

For a more professional-looking installation, the antenna cable may be run under the door seal. Carefully pull down the door seal. Run the cable under the seal and push the seal back into place. This prevents constant wear and tear on the cable as the door opens and closes. The antenna cable is small enough to easily tuck under the door seal or plastic molding.



RF Safety Warning: The "outside antenna" must be either a Wilson Magnetic-Mount or Mini Magnetic-Mount antenna and requires at least an 8 inch separation distance from all persons. Other outside antennas may be used with fixed building installations provided that (a) they are located with at least a 30 inch separation distance from all persons, (b) their gain less cable loss does not exceed 15 dBi, and (c) they are not operating in conjunction with any other antenna or amplifier.

2. Attach the Mounting Bracket

A mounting bracket is provided for attaching the Sleek™ to your vehicle's dash. Other options are also available from Wilson Electronics.



ADHESIVE BRACKET- Included in this package

1. Clean the area where the bracket is to be mounted with the alcohol wipe provided. Allow to dry.
2. Peel the backing to expose the adhesive and press the bracket onto the desired location in the vehicle. Note: be sure the tab is positioned **vertically**, not horizontally.
3. **Allow the adhesive to cure for 24 hours before you attach the Sleek™.**
4. Once the cradle is attached, you can adjust the angle of the adhesive bracket by applying gentle pressure to the top or bottom of the Sleek™. The bracket is designed to swivel when the knurled nut is loosened for greater adjustability of the Sleek™ viewing angle. To lock bracket into position, tighten large nut.

3. Attach the Sleek™ to the Bracket

Once you have installed the bracket in the desired location, and waited 24 hours for adhesive to cure, attach the Sleek™ by aligning the rectangular hole on its back with the tab on the mount bracket, grasping the sides of the Sleek™, and sliding it downward approximately ¼ inch into place.

4. Attach the Outside Antenna cable to the Sleek

Attach the cable from the outside antenna to the antenna connector on the Sleek.

Power up the Wilson Sleek™

IMPORTANT: Make sure the outside antenna cable is connected before powering up the Sleek™.


Connect the mini-USB plug on the power cable to the Sleek's mini USB port located on the bottom of the Sleek™ and insert the adapter into the cigarette lighter outlet of your vehicle. The Sleek™ may remain on all the time. However, leaving the Sleek™ on in a vehicle when it is not running can discharge the battery in a day or two.

Note: The 12V DC power source on many vehicles is shut off with the ignition key.

WARNING: Use only the supplied Wilson power supply.



Accessory USB Power port

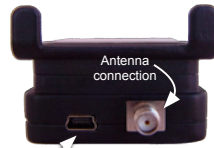

Sleek™ Power connector.
Connect to Wilson's power supply

Adjusting the Sleek™ Arms

Included with your Sleek are various sized arms, which will provide you with multiple options to customize the Sleek™ to fit your phone.




1. Change arms

Gently grab the arm and lift upward until the arm breaks free from the Sleek™.



2. Reposition arms

Position the arm above a different slot on the Sleek™ (indicated by the yellow in the drawing). Gently slide the arm down until the arm is firmly in place.

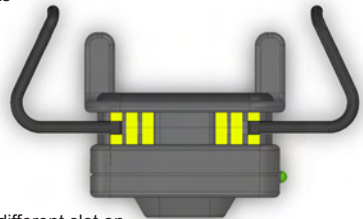

NOTE: The cell phone must be placed in the Sleek™ to work properly. Use a Bluetooth or wired hands free device.

Understanding the Sleek™ Lights

Separation of Sleek™ and the outside antenna is very important. In a vehicle, the metal roof acts as a barrier and helps shield the two antennas from each other, preventing oscillation.

Oscillation can occur when the roof mounted antenna is too close to the Sleek™ inside the vehicle. An oscillation (or feedback) in the Sleek™ is similar to when a microphone is too close to a speaker in a sound system, resulting in a loud whistle. An oscillation in the Sleek™, if allowed to occur, can affect nearby cell sites' ability to handle calls.

Green light is on : Sleek™ is operating properly

SYMPTOM: No light, or light always off

- 1) Make sure that the power supply for the Sleek™ is functioning properly, by making sure the light located on the power supply is lit.
- 2) If the DC plug-in power supply is properly inserted, but the plug's light doesn't come on, then check the 12 volt power from the car socket, and check the fuse in the DC plug-in power supply.

SYMPTOM: No increase in Bars

- 1) Make sure that the antenna connector is tight.
- 2) **The cell phone must be placed in the Sleek™ cradle to amplify properly.**
- 3) Call Wilson Technical Support at 866-294-1660.



Warning: DO NOT use phone covers that have chrome or any other metallic surface. It may block cellular signals

Building Installation

Installing a Wilson Outside Antenna in a Building

Follow the specific antenna instructions included with the outside antenna (sold separately except for certain kits). These instructions assume that you are using a Wilson Mini Magnet-Mount Antenna and the optional suction-cup window bracket.

To receive the best signal, select a window on the side of your building where your outside signal is the strongest.



Attach the suction-cup bracket to the inside of a window so that the cable will reach the location of the Sleek™. Place the bracket as high on the window as possible for best performance.

Suction cup Antenna Window Mount is available from Wilson Electronics.
www.wilsonelectronics.com or call 800-204-4104



Once the bracket is in place, attach the magnet base of the antenna to the flat surface of the bracket. Note: the antenna must be installed vertically. Signal performance will be degraded if the antenna is not vertical.


Installing the Wilson Sleek™ Signal Booster in a Building

The Wilson Sleek™ may be placed in any convenient indoor location, such as a desk or tabletop. The cell phone must be in the cradle and a Bluetooth® headset used for voice communications.

Attaching the Antenna

Once you have selected the location for the Sleek™, run the cable from the outside antenna and attach it to the SMA connector on the bottom of the Sleek™.

Note: The Sleek™ and the outside antenna must have a minimum separation of 3 feet to prevent oscillation. **Note: The cell phone must be placed in the Sleek™ cradle to amplify properly.**

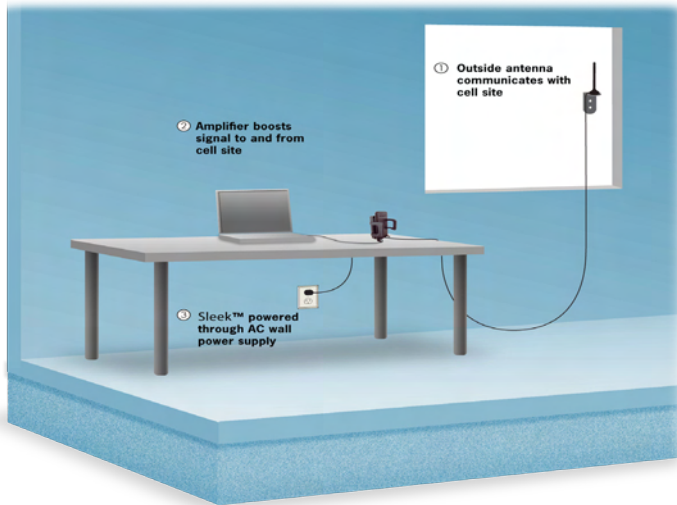

About Wilson Electronics

Wilson Electronics, Inc. has been a leader in the wireless communications industry for nearly 40 years. The company designs and manufactures signal boosters, antennas and related components that significantly improve cellular telephone signal reception and transmission in a wide variety of applications, both mobile and in-building.

With extensive experience in antenna and amplifier research and design, the company's engineering team uses a state-of-the-art testing laboratory, including an anechoic chamber and network analyzers, to fine-tune antenna designs and performance. For its amplifiers, Wilson uses a double-shielded RF enclosure and cell site simulators for compliance testing.

All products are engineered and assembled in the company's 55,000-square-foot headquarters in St. George, Utah. Wilson has product dealers in all 50 states as well as in countries all over the world.



For free U.S. based technical support or to order accessory items please call 800-204-4104 or visit www.wilsonelectronics.com

Signal Booster Specifications

		Dual Band 800/1900 MHz Specifications	
Model Number / Part Number	2B5225/815225.815226, 815226F		
Connectors	SMA Female		
Impedance (input/output)	50 ohms		
Frequency	824-894 MHz / 1850-1990 MHz		
Passband Gain (nominal)	20 dB (typical) / 30 dB (maximum)		
20 dB Bandwidth (nominal)			
	800 MHz (uplink/downlink)	43 MHz / 45 MHz	
	1900 MHz (uplink/downlink)	112 MHz / 84MHz	
Power output for single cell phone (uplink)	800 MHz	1900 MHz	
	CDMA	28.9 dBm	31.8 dBm
	GSM	30.9 dBm	32.6 dBm
	EDGE	30.9 dBm	31.9 dBm
	WCDMA	30.13 dBm	31.4 dBm
Power output for single received channel (downlink)	800 MHz	1900 MHz	
	CDMA	-9 dBm	1.0 dBm
	GSM	-1.3 dBm	1.8 dBm
	EDGE	-1.3 dBm	2.1 dBm
	WCDMA	-.32 dBm	2.3 dBm
Power output for multiple received channels (downlink). The maximum power is reduced by the number of channels:	Number of channels	Maximum Power ³	
		800 MHz	1900 MHz
	2	-1.1 dBm	2.2 dBm
	3	-4.7 dBm	-1.4 dBm
	4	-7.2 dBm	-3.9 dBm
	5	-9.1 dBm	-5.8 dBm
	6	-10.7 dBm	-7.4 dBm
Noise Figure (typical)	3 dB nominal		
Isolation	> 40 dB		
Power Requirements	5V DC, 1A		

Notes:

- Nominal gain is the maximum gain at any frequency in the passband.
- Nominal bandwidth is the difference between two frequencies that are adjacent to the passband where the amplification is 20 dB lower than the passband amplification. One of the frequencies is lower than the passband and the other is higher.
- The Manufacturer's rated output power of this equipment is for single carrier operation. For situations when multiple carrier signals are present, the rating would have to be reduced by 3.5 dB, especially where the output signal is re-radiated and can cause interference to adjacent band users. This power reduction is to be by means of input power or gain reduction and not by an attenuator at the output of the device.
- The maximum power for 2 or more simultaneous signals will be reduced by 6 dB every time the number of signals is doubled.

Warnings:



Warning:

Do not plug in the power supply until the outside antenna cable is attached to the Sleek™.



Warning:

RF Safety: The Sleek™ cradle/amplifier must be installed with a separation of at least 8 inches from all persons and must not be located in conjunction with any other antenna or amplifier.



Warning

RF Safety: The FCC requires that a cell phone with cradle attached may only be used with the cradle mounted as illustrated in this installation guide. A cell phone held near the ear must be without the cradle attached.



Warning:

RF Safety: The Outside Antennas authorized for use with this amplifier are shown on page 1 of this guide. Other antennas may be used, but only in fixed installations when located outside of a building or structure (not in mobile/ portable installations), provided that:

- antenna location ensures at least a 30 inch separation distance from all persons,
- antenna gain less cable loss does not exceed 15 dBi, and
- such antennas are not operating in conjunction with any other antennas, or transmitting devices.



Warning:

DO NOT use phone covers that have chrome or any other metallic surface. It may block cellular signals

30-Day Money-Back Guarantee

All Wilson Electronics products are protected by Wilson's 30-day money-back guarantee. If, for any reason, the performance of any product is not acceptable, simply return the product directly to the reseller with a dated proof of purchase.

1-Year Warranty

Wilson Electronics amplifiers are warranted for one (1) year against defects in workmanship and / or materials. Warranty issues may be resolved by returning the product directly to the reseller with a dated proof of purchase.

Amplifiers may also be returned directly to the manufacturer at the consumer's expense, with a dated proof of purchase and a Returned Material Authorization (RMA) number supplied by Wilson Electronics. Wilson shall, at its option, either repair or replace the product. Wilson Electronics will pay for delivery of the repaired or replaced product back to the original consumer within the continental United States.

This warranty does not apply to any amplifiers determined by Wilson Electronics to have been subjected to misuse, abuse, neglect, or mishandling that alters or damages physical or electronic properties.

RMA numbers may be obtained by phoning Technical Support at 866-294-1660.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

Disclaimer: The information provided by Wilson Electronics, Inc. is believed to be complete and accurate. However, no responsibility is assumed by Wilson Electronics, Inc. for any business or personal losses arising from its use, or for any infringements of patents or other rights of third parties that may result from its use. Copyright © 2008 Wilson Electronics, Inc. All rights reserved.